

SIEMENS

SONOCUR

SP

System Manual

Installation Instructions

Unpacking the system

© Siemens AG 2002

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

English

Doc. Gen. Date: 08.02

Print No.: SPT3-130.812.01.01.02

Replaces: n.a.

Document revision level

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

Disclaimer

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.



Fig. 1 Required tool 8 mm (5/16")

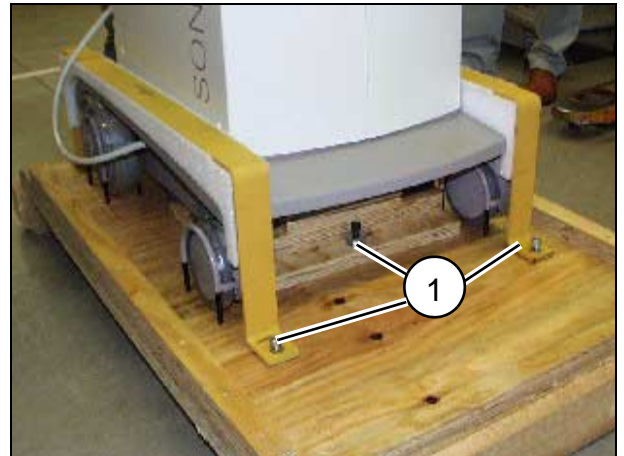


Fig. 2 Remove the screws (1/Fig. 2)

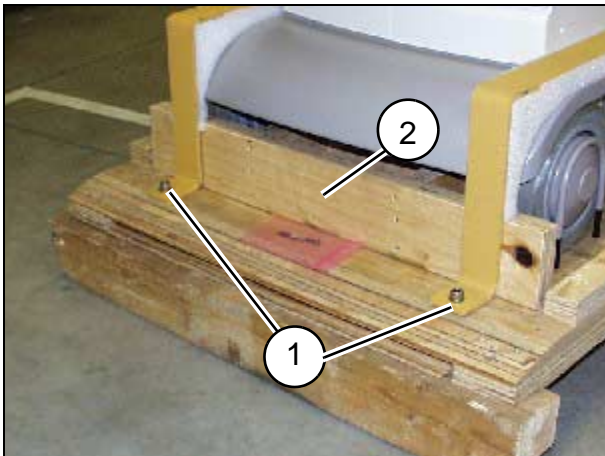


Fig. 3 Remove the screws (1/Fig. 3),
remove the transport safety device (2/Fig. 3)



Fig. 4 Pull the ramp out of the transport pallet

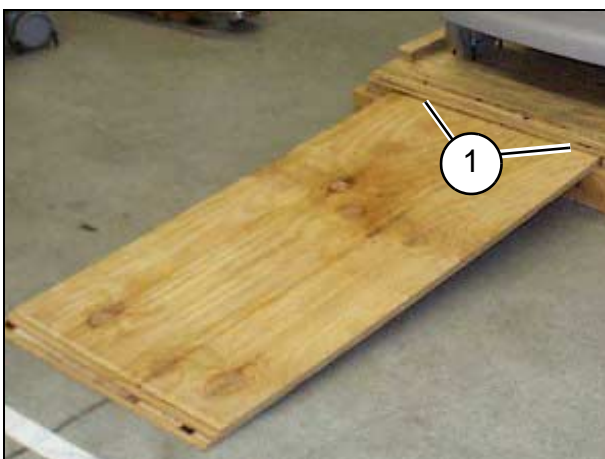


Fig. 5 Secure the ramp with two nails (1/Fig. 5)



Fig. 6 Move the system down from pallet

This page intentionally left blank.